Remote Control Configuration for VCR/DVD

This remote control is set by default to operate the basic functions of this Sony TV, Sony DVD and most Sony VCRs when batteries are initially installed. To control VCRs and DVDs of other major brands and certain Sony VCR models, please complete the following steps:

- Before you start, look up the 3 digit code for your brand of DVD or VCR from the list on next page. On those brands that have more than one code, enter the first code number.
- Sony will endeavour to update the software according to market changes. Therefore, please refer to the code table included with the remote control for the latest code set.

1 Press the Media Selector button on the remote control repeatedly until the required VCR or DVD green light lights up.

If Media Selector is in the TV position, code numbers will not be stored.

2 Before the green light goes out, press and hold the yellow button for approximately 6 seconds until the green light starts flashing.

3 Whilst the green light is flashing, enter all three digits of the code for your brand (see next page) using the number buttons on the remote control.

If your selected code is entered correctly, all three green lights will be lit momentarily.

4 Turn on your VCR or DVD and check that the main functions work.

- If your equipment is not working or some of the functions do not work, please check you entered the correct code set or try the next code listed against the brand (see next page).
- Your brand codes may be lost if weak batteries are not replaced within a few minutes. To reset your DVD or VCR code number please repeat the above steps. A small label is attached inside the battery door to allow you to record your brand codes.
- Not all brands are covered and not all models of every brand may be covered.

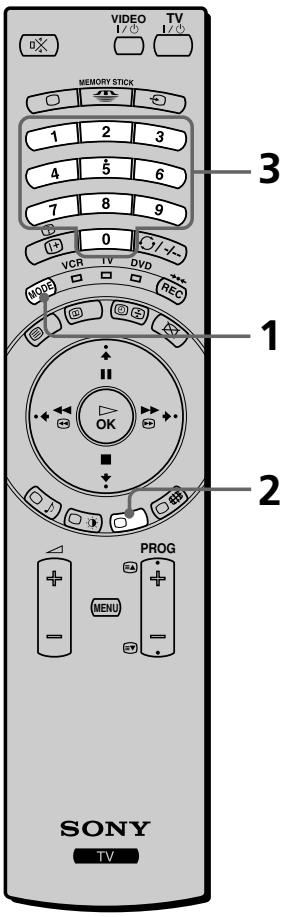

(continued)

VCR Brand List		DVD Brand List	
Brand	**Code**	**Brand**	**Code**
SONY (VHS)	301, 302, 303, 308, 309	SONY	001
SONY (BETA)	303, 307, 310	AIWA	021
SONY (DV)	304, 305, 306	DENON	018, 027, 020, 002
AIWA	325, 331, 351	GRUNDIG	009, 028, 023, 024, 016, 003
AKAI	326, 329, 330	HITACHI	025, 026, 015, 004
DAEWOO	342, 343	JVC	006, 017
GRUNDIG	358, 355, 360, 361, 320, 351	KENWOOD	008
HITACHI	327, 333, 334	LG	015, 014
JVC	314, 315, 322, 344, 352, 353,	LOEWE	009, 028, 023, 024, 016, 003
	354, 348, 349	MATSUI	013, 016
LG	332, 338	ONKYO	022
LOEWE	358, 355, 360, 361, 320, 351	PANASONIC	018, 027, 020, 002
MATSUI	356, 357	PHILIPS	009, 028, 023, 024, 016, 003
ORION	328	PIONEER	004
PANASONIC	321, 323	SAMSUNG	011, 014
PHILIPS	311, 312, 313, 316, 317, 318,	SANYO	007
	358, 359	SHARP	019, 027
SAMSUNG	339, 340, 341, 345	THOMSON	012
SANYO	335, 336	TOSHIBA	003
SHARP	324	TOSHIBA	337
THOMSON	319, 350	YAMAHA	018, 027, 020, 002

GB